

Installation Instructions

Ultraviolet Disinfection System Control Module

UV20-PCUV2000

1. Unpack the carton box and verify that all the required components have been received.
 - Control Module (1)
 - Screws (4)
 - Lock Washer (1)
 - Safety Rod Plunger (1) *Only for systems without the lamp out circuit option*
 - Installation Guide
2. Connect UV lamp into four-pin socket located at the bottom of UV control module.
3. Carefully insert the UV control module with UV lamp through mounting bracket into the quartz sleeve.
4. Install the UV20 control module on top of the ultraviolet disinfection system's bracket with four screw and one lock washer (for grounding purpose) as shown in figure 1.
5. For UV20 series ultraviolet disinfection systems without the lamp out circuit (LOC) option, install the safety rod plunger as shown in figure 2.

Figure 1

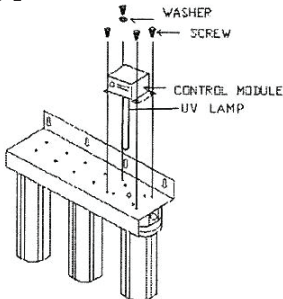


Figure 2

